



## SOFTWARE CONTROL SERVICES (PTY) LTD

*Control by micro processor is our business*

*"You name it, we'll control it"*

Unit 26B, Woodbridge Business Park,  
Koeberg Road, Milnerton, 7441

P O Box 3233, Cape Town, 8000

Tel. No.: (021) 551-5728 / 551-4513

Fax No.: (021) 551-3949

E-mail: [softcape@mweb.co.za](mailto:softcape@mweb.co.za)

Web: [www.softconserv.com](http://www.softconserv.com)

## SCS\_DB\_Install

This document describes the procedures and requirements of SCS\_DB\_Install.

### Requirements

The program expects the following files in the correct directories:

#### **C:\Softwin3\Softwin3.reg**

Registry information for MS Access databases.

#### **C:\Softwin3\Softwin3\_SQL.reg**

Registry information for SQL databases

#### **C:\softwin3\database\default\Access**

Softwin3 default data and report files in MS Access format

#### **C:\softwin3\database\default\SQL2000**

Softwin3 default data and report files in SQL2000 format

#### **C:\softwin3\database\default\SQL2005**

Softwin3 default data and report files in SQL2005 format

The following tables are required in the C:\Softwin3\Config\Database.mdb database.

TABLES_ACCESS	Softwin3 TABLES information for MS Access
TABLES_SQL	Softwin3 TABLES information for SQL
SOURCES_ACCESS	Softwin3 SOURCES information for MS Access
SOURCES_SQL	Softwin3 SOURCES information for SQL

### Parameters

The program can be started with the following parameters:

/Access	Start auto installation for MS Access data.
/SQL2000	Start auto installation for SQL2000 data.
/SQL2005	Start auto installation for SQL2000 data.
/PCname:LocalHost	Auto register local computer name for ODBC driver. (SQL only)
/PCname:Compname	Auto register computer name for ODBC driver. (SQL only) Compname = Computer name running SQL databases

#### **Command line example:** /SQL2005 /PCname:LocalHost

Installation will automatically copy the required tables to operational tables. Local computer name will be sourced and new registry file will be created and registered. All files from requested default directory will be copied to c:\softwin3\database. After installation program will automatically terminate.

The end.