



SOFTWARE CONTROL SERVICES (PTY) LTD

475 King's Highway, Lynnwood
P.O.Box 36675, Menlo Park
Pretoria, South Africa
0102

(t) +27 12 348 7301
(f) +27 12 348 1129
(e) techsupport@softconserv.com
www.softconserv.com

Areazone Setup.

Version 0. 1

Prepared by: Michael Davis- Hannibal

Softcon Software Control Services (Pty) Ltd.

7 March 2017



Revision History

Name	Date	Reason For Changes	Version
MDH	5-Nov-10	Initial document	0.1

Contents

1. Comms Interface Setup	Error! Bookmark not defined.
a. Fields	3


○ Area Zone Setup

An area zone is a physical zone in the access control system.

The setup can be found by clicking **Setup, setup editor, area zone, open**.

a. Fields

- **Zone:** Name of the area zone. Examples include Reception, Parking, ...
- **Link:** Where two readers have different zones but still require APB to function. Create a Link zone and link all Zones to Link zone.

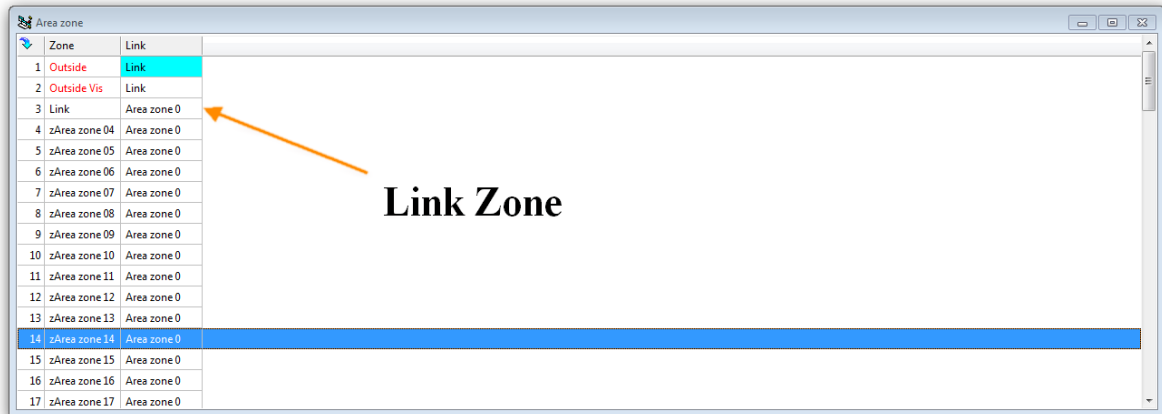

	Zone	Link
1	Outside	Link
2	Outside Vis	Link
3	Link	Area zone 0
4	zArea zone 04	Area zone 0
5	zArea zone 05	Area zone 0
6	zArea zone 06	Area zone 0
7	zArea zone 07	Area zone 0
8	zArea zone 08	Area zone 0
9	zArea zone 09	Area zone 0
10	zArea zone 10	Area zone 0
11	zArea zone 11	Area zone 0
12	zArea zone 12	Area zone 0
13	zArea zone 13	Area zone 0
14	zArea zone 14	Area zone 0
15	zArea zone 15	Area zone 0
16	zArea zone 16	Area zone 0
17	zArea zone 17	Area zone 0

Link Zone