
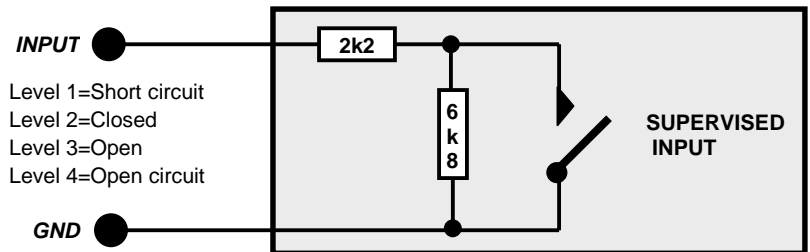


Bioscrypt Veri Reader CR374 connections

Rev 01.00

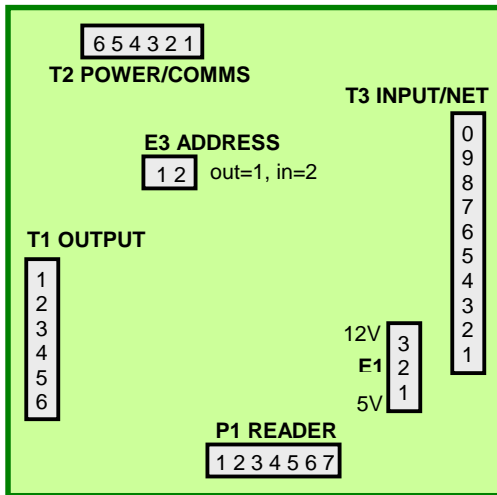

P1	Reader	Veri FingerPrint Reader	
1	Power 12V (E2 2-3)	13	Power 12V
2	LO in	1	LO out
3	HI in	3	HI out
4	Ground	6,11,12	Ground
5	Green LED		
6	Yellow LED		
7	Red LED		

T1	Output	Veri FingerPrint Reader	
1	Relay 2 common		
2	Relay 2 NC		
3	Relay 1 common		
4	Relay 1 NO		
5	Aux out 1	2	LO in
6	Aux out 2	4	HI in

T2	Power/Comms	Veri FingerPrint Reader	
1	Ground		
2	Data – TX		
3	/Data – RX		
4	AC or DC in		
5	AC or DC in		
6	Ground		

T3	Supervised Inputs
1	Input 4
2	Input 3
3	Ground
4	Input 2
5	Input 1
6	Ground
7	1 Wire
8	SDA
9	SCL
10	Ground

Veri FingerPrint Reader Colours		
1	Green	LO out
2	Green/white	LO in
3	White	HI out
4	White/black	HI in
5	Grey	TTL Output
6	Black/white	Wiegand Gnd
7	Blue/black	/RS485
8	Blue	RS485
9	Violet	RS232 Tx
10	Violet/white	N/A
11	Black	Power Gnd
12	Black/red	Signal Gnd
13	Red	Power (7-24V)
14	Red/white	Shield*
15	Green/yellow	N/A

Note: pin 14 of Veri reader must be connected to earth.